USER MANUAL

LATEST VERSION: 1.0

I-MODO.NET

Catalogues

Catalogue ..... ¡Error! Marcador no definido.
Declarations ..... ¡Error! Marcador no definido.
Note ..... ¡Error! Marcador no definido.
Basic function ..... ¡Error! Marcador no definido.
Preparations before using ..... ¡Error! Marcador no definido.
Apperance ..... ¡Error! Marcador no definido.
Button function ..... ¡Error! Marcador no definido.
Button action definition ..... ¡Error! Marcador no definido.
Turn on/off ..... ¡Error! Marcador no definido.
Low power ..... ¡Error! Marcador no definido.
Expansion card ..... ¡Error! Marcador no definido.
Connect to PC 6
System requirements ..... ¡Error! Marcador no definido.
connect to PC 6
Music ..... ¡Error! Marcador no definido.
Music playback interface 7
Menu item 7
Video ..... ¡Error! Marcador no definido.
Menu item ..... ¡Error! Marcador no definido.
Record 10
Record interface 10
Menu item 10
Voice 11
Menu item 11
RM radio 11
RM interface ..... ¡Error! Marcador no definido.

I-MODO.NET

menu item .....¡Error! Marcador no definido.
picture ..... ¡Error! Marcador no definido.
menu item .....¡Error! Marcador no definido.
Ebook reading..... ¡Error! Marcador no definido.
menu item .....¡Error! Marcador no definido.
File browsing..... ¡Error! Marcador no definido.
System setting ..... ¡Error! Marcador no definido.
Tool ..... ¡Error! Marcador no definido.
Troubleshootings..... ¡Error! Marcador no definido.

I-MODO.NET

Declarations

1. without the prior written permission, it is prohibited to copy, transfer, distribution or storage of any of the contents of this manual

2. We make the efforts to make sure the content is accurate and complete in the course of the preparation of this manual, but does not guarantee this manual without any errors or omissions. the company will not responsible for errors or omissions.

3. Following the strategy of continuous development, therefore, we reserve without prior notice, to any of the products described in the manual of the right to make changes and improvements

4. in any case, we are not against any loss of data or income or any special, incidental, consequential, or indirect damages howsoever caused by which the loss.

Note

this section is for users of the proper use of players, to ensure good performance and set the player, please read and comply with the following instructions.

- **Please** do not seriously hit player
- Do not touch benzene, thinner and other chemicals
- do not go near a strong magnetic field, electric field
- avoid direct sunlight or heating appliances
- do not disassemble, repair, alteration
- cycling, driving cars and motorcycles, do not use the player and headphones, so as to avoid danger.
- do not listen with a larger volume, so as to avoid adverse effects on hearing
- **Please handle classified packaging waste, batteries, used electronic products.**

I-MODO.NET

Basic function

1、 Music playback：support the format of MP3 and WMA etc.
2、 Record：support FM and MIC record with the format of WAV.
3、 Picture browsing：support the format of JPEG, BMP, GIF
4、 Video playback：support the format of AMV（need convert tool）.
5、 Support FM Radio.
6、 Support E-book reading.
7、 Setting function：support the display and setting for all functional attribute.
8、 Support USB upgrading
9、 Support file navigation function
10、 With micro-SD card slot
11、 Support multi-languages

Preparation before using

I-MODO.NET

Appearances:

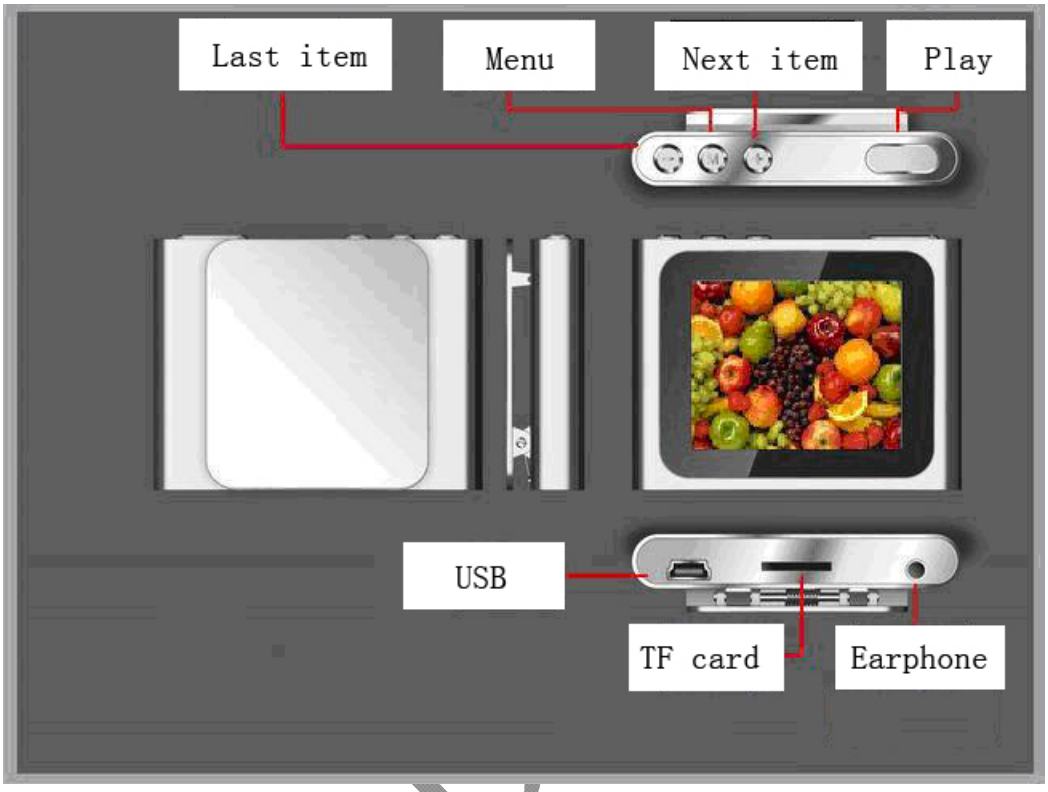

Button functions:

1. **MENU**：menu/confirm menu。Long press：exit to main interface
2. －：choose last item or file, long press is for rewind
3. ＋：choose next item or file, long press is for fast forward
4. **Playback button**：Play/stop playing file, also for exit button

Button action definition

Action	Basic operation
Short press	Hold time is less than 1.2 seconds
Long press	Hold time is more than 1.2 seconds
hold	Press button and keep this status

note：**It means short press** without special instructions

I-MO

Turn on/off

Use hardware switch or long press play button to turn on/off
When the system standby time reach to set off time, the machine will be turn off automatically.
Note：when the machine connect to pc, this function will out of use.

Low power

When the machine is lack of power, it will appear 'low battery', then turn off machine automatically, please charge in time.

Expansion card

Please insert micro-SD card before using this player

Connect to PC

System operation requirements

operation system：Windows XP&Vista/2K/ME/98(need install driver) /Mac OS 10
CPU：at least Pentium-133MHz
Memory：at least 32MB
Hard disk free space：at least 100MB
Video card：640*480 above, at least high color（16 bits）
USB port
CD-ROM drive

Connect to PC

Connect the machine to PC with the attached USB cable, the system is in USB mode，then enter into application function interface.

I-MODO.NET

Music

Choose <**music**> from main menu, press '**MENU**' button to enter into music playing interface.

Note: Reboot, system default stay back to application interface at last level.

Music playback interface

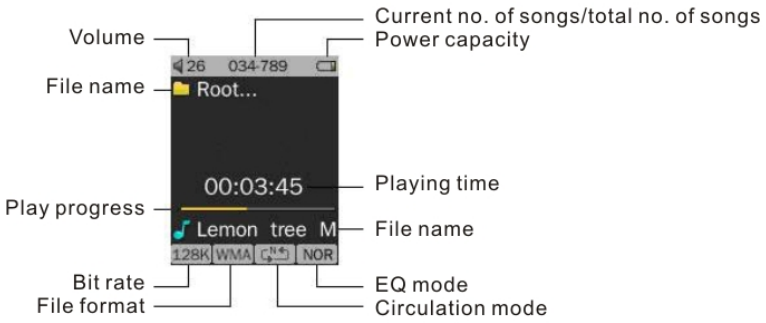

1. Press PLAY to play or pause, press − and + to turn to last file or next file, long press − and + to fast forward/rewind.
2. This machine support lyric display with LRC format, if there is lyric file, long press **MENU** to enter into lyric display interface while playback, short press **MENU** to exit.

Submenu

Press **MENU to enter**, press − and + **to browse menu,** press **MENU to enter file,** press **PLAY** to enter, long press **MENU** button to exit.

Submenu including：now playing、card folder、create playlist、**setting,** delete file and delete all.

note：

Ⓓ！ At now playing interface，press **MENU to enter into menu item** ,no delete file and delete all.

Enter into menu item again ， cursor at the last exit

1. **on playing：continue to play** from the last breakpoint, there will be no display without any playing music before now.
2. **Card folder：list folder and music files in card.**
3. **Create playlist：create playback list according to** ID3 info.
4. **Playback setting：**
   1) **Change Volume：** press'－and ＋' to choose volume.
   2) **Repeat**

circulation modes	display	instruction
normal		play all files in order
Repeat one		loop current track
Folder		Play current directory files in order.
Repeat folder		loop play current directory files.
Repeat all		Loop all tracks
shuffle		random repeat play the file.
intro		browse play the file, preview 10 seconds of each tracks

   3) **Equalizer：Natural, Rock, Pop, Classic, Soft, Jazz, DBB**
   4) **Tempo rate:**

☐**Playback speed setting：** press －and ＋ **be choose playback speed,** -8~+8.

☐**Fast forward/rewind speed ：** Setting rewind/fast forward speed ，1x/2x/4x/8x/16x。

   5) **Replay settings：**

① **Replay mode**

i. After choose replay mode，system exit to playback interface，it will show at the lower left corner of the screen, it means enter into replay function，A start to blink as starting point, press＋，B

start to blink as end point. press－again，replay setting is finished from A to B replay.

ii. System will start to replay according to the replay times and replay gap, if system setting is settled to manual replay（ref. setting-**replay mode**），need to set replay starting point and stopping point again after finishing replay times，if setting is settled to auto replay,，only need to set starting and stopping point by manual after finishing replaying,，system will set stopping point by auto according to Phrasing or blank，during the period, press － to reset system replay mode during replaying time.

iii. press **MENU** to exit to music playback interface.

② **Replay times**：press－and＋ set repeat times：1-10，default is 5。

☐ **Replay gap**：**setting gap time between the two times repeating**，1－10seconds，default 1 second.

6) **Bookmark**

Bookmark select：browse current music's bookmark，music will start to play from bookmark's position.

Bookmark delete：delete current music's bookmark.

Bookmark add：save the current broadcast schedule to the list of bookmarks, each music max. support to 10 bookmarks and 15 files.

Exit：exit to playback interface.

5. **Delete file**：**delete the files in the current directory,** press **MENU** to enter into file list, press again to enter into deleting interface, choose **cancel delete** or **confirm delete,** press again **MENU** button to exit to last level.

6. **Delete all**：**delete all files** in the current directory, operation is the same as deleting file.

Video

Choose <**Video**> at main menu, press **MENU** button to enter into playback interface. Video playback interface please refer to music playback interface.

Basic operation：

1. press **MENU to enter into movie playback**，long press －and ＋ to rewind and fast forward，press **PLAY** to play or pause, system come back to info. Interface.
2. press － and ＋ to search next file or last file.

I-MODO.NET

Submenu

Submenu including：**card folder, repeat, delete file** and **delete all.** Functions are the same as **<Music>**.

Record

Choose **<Record>** from main menu, press **MENU** to enter into record interface.

Record interface

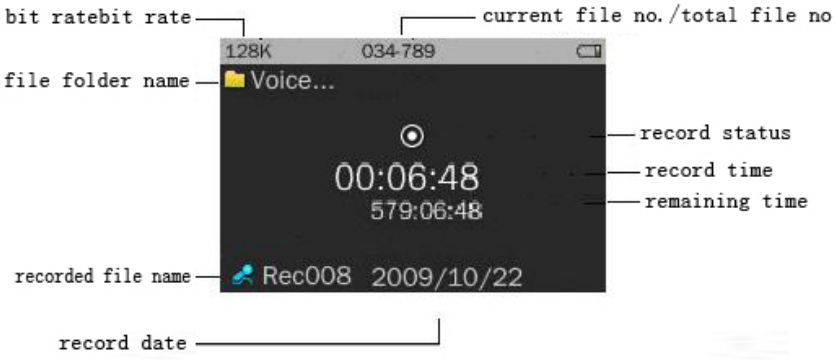

1. Press PLAY to start/pause/continue to record.
2. Long press **PLAY** to store record content and start new record.
3. Long press **MENU** system to store current record automatically and exit to main menu.
4. The recorded file will be stored in the record catalogue of outer storage device.

Submenu

Press **MENU** to enter into submenu including，**card folder, record format**

Note：

☐ when there is low power signal at pausing，system will store record content and exit to record interface

☐ when the disk is full，system remind 'space full!'

1. **Record format：set the format of the recorded file**, four format for your option.

Other submenu's functions and operations are the same as <**Music**>.

Play

Choose <**play**> at main menu，press **MENU to enter into submenu**.

Submenu

Including：now playing、card folder、settings、delete file and delete all。

Play settings：volume adjustment、circulation mode.

Other submenu's functions and operations are the same as <**Music**>.

FM radio

Choose <**FM**> at main menu，press **MENU to enter into submenu**.

I-MODO.NET

FM interface

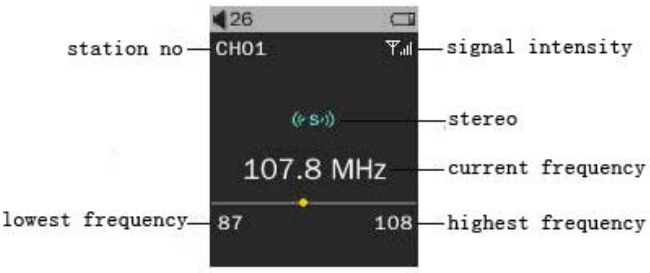

1. manual search：**press － and ＋ to adjust station, long press － and ＋ to automatically search last/next station and listen. press － and ＋ to stop the auto search.**

Breakpoint play：Fm state is saved after exit, and re-entering from the listening to continue to play the radio when playing out.

Submenu

Press MENU to enter into submenu，including：volume adjustment、store station、**stationrecord**、**delete station**、**delete all**、**auto search**、**normal band**、**japanese band and exit.**

1. **volume adjustment**：press － and ＋ to adjust volume capacity.
2. **store station**：store current station.
3. **Station record**：**After choose station record**，system come back to record interface to start to record，this operation is the same as record operation.
4. **Delete station**：remove the current station from the saved radio programs.
5. **Delete all**：Delete all stations from saved radio programs.

Auto search：choose this item，press **MENU to exit to radio interface and start to auto search**

I-MODX

station, after search the programs，system will save the stations automatically，and display CH01 at interface, and keep search following stations，and store them in accordance with the number

6. press **MENU to stop search**，press play to switch the saved stations。Stop after auto search 20 stations.
7. **Normal band**：band range：china / us. band；87MHz-108MHz.
8. **Japanese band**：band range：76MHz ~ 90MHZ.
9. **Exit**：Exit from submenu.

Picture

Choose <**Picture**> at main menu, press **MENU to enter into picture browsing**

Press'－and ＋' to choose picture，press 'PLAY' to play pictures，press this button again to exit to picture browsing

Submenu

At picture browsing interface，press **MENU** to enter into submenu，including **card folder，playback set，scan mode，auto rotation，delete file，delete all.**

1. **Playback setting:**
   ☐**Manual playback**：press'－and ＋' to check last or next picture
   ☐**Auto playback**：adjust time gap of auto playing picture（1-10s），，press'－and ＋'to adjust value，press **MENU** to confirm.

Other submenu's functions and operations are the same as <**Music**>.

Text

Choose <**Text**> at main menu，press **MENU** to enter into text list.

1. press'－'and'＋'to choose text，press 'play' to enter.
2. press'－'and'＋' to turn page forward and backward，press 'play' button again to exit.

I-MODO.NET

Submenu

Press **MENU** to enter into submenu at text file list，including **card folder, playback set, delete file, delete all, and exit.**

1. **Playback settings**：

☐**Manual play**：press'－'and'＋' to check last or next page

☐**Auto play**：adjust time gap of auto playing for EBook（1-10s），'－or＋' to adjust volue，press **MENU** to confirm.

Other submenu's functions and operations are the same as <**Music**>.

Press **MENU** to enter submenu at text reading interface，including **bookmark select，bookmark delete，bookmark add and exit. This function is like the bookmark function at <Music>**. Every text file max support 16 bookmarks.

Browser

Choose <**Browser**> at main menu，press **MENU** to enter into file list.

1. press'－and＋' to browse all files，press **MENU to open file**.

Settings

Choose <**Settings**> at main menu，press **MENU** to enter.

1. **LCD set**

Dark mode：Backlight will be closed without any operation within set time。Setting range：0～30 seconds，step width：3 seconds.。The mode is invalid in the following interface：picture display interface，video playing interface，text reading interface，USB connecting interface，lyric display interface.

2. **Language**

I-MODO.NET

Supported languages：english, French etc.

3. **Power off**
   - ☐ **Off time**：set off time without any operation，range: 0-60 seconds，step width：10s, power-saving mode is invalid in the USB, audio and video playback, recording.
   - ☐ **Sleep time**：set sleep off time without any operation，range：0-120 minutes，step width：10 minutes，sleep mode is valid in any modes except for USB mode.

4. **replay mode**
   - ☐ **Manual replay**：set audio files mode when manually set AB repeat mode with stopping point B.
   - ☐ **Auto replay**：set audio files mode when automatically set AB repeat mode with stopping point B.

5. **Firmware version**：show firmware version info.

6. **Exit**：exit to main menu interface of system setting.

Tool

Choose <**TOOL**> at main menu，press **MENU** to enter.

1. System time：set system time。Press 'play' button to choose year/month/date/munite/second，press'－'or'＋'to adjust volume.

2. Firmware upgrade

Software is offered to upgrade or repair firmware.

1) Download latest version of firmware
2) Connect player to the port of pc, make sure the connection is ok, and other movable disk have not connected to this pc. Run the tool, if the internal firmware is intact，tool will switch to firmware upgrade mode, also display the version info. Of the internal firmware at left up corner, click "choose new version file" to choose the firmware file which need to be upgraded. the interface of the upper right corner of the box will show the selected version of the firmware file and other information after tools detect and correct firmware file. click "start upgrade" to start firmware upgrading. If the internal firmware is corrupted, the tool will switch to the state to restore the firmware
3) at this point the software interface within the upper left corner of the box shows the firmware version of the player, and other information is empty, and requires the user

I-MODO.NET

to select a correct firmware file to restore the damaged firmware. **meanwhile, it will display firmware version at the right up corner，click“ start to upgrade” to upgrade firmware.**

4) Do not break the connection with the pc in the process of firmware upgrade or restore the player, after finish the upgrading, it will remind' firmware upgrade success, the software will exit automatically!', after confirm, the tool will automatically turn off and reset the player, finish upgrading.

5. storage stutas：display the whole capacity and the percentage of used space.

Troubleshootings

Media player don't work or there is no content on LCD
-Check the battery capacity
the button do not work
-no battery，or battery capacity is used up
can not download files
-Check the connection between usb port and usb cable.

-Format card

I-MODO.NET